Print on Plain White Paper (Part No. 122919)

MIDMARK®

Installation Instructions

404/405 Large Paper Roll Holder

404 Large Paper Roll Holder Installation

DRILLING MOUNTING HOLES

1. Remove upholstery and position back section vertical to gain access to inner back as indicated in Figure 1.

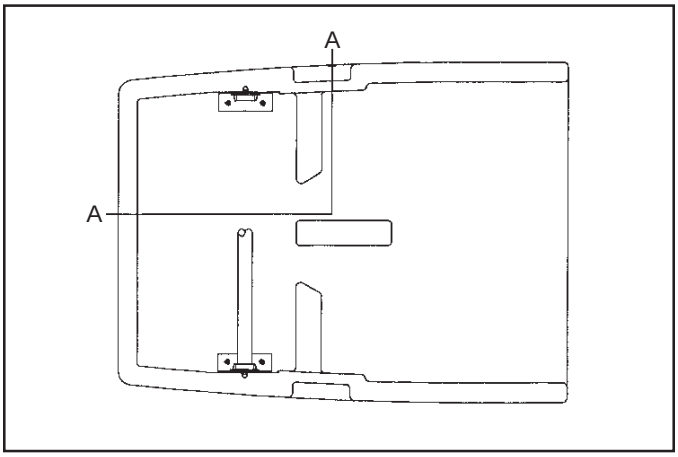

FIGURE 1

2. Remove old plant installed paper roll sockets.

3. Position paper roll bracket on the inside of back plastic using the dimension shown in Figure 2.

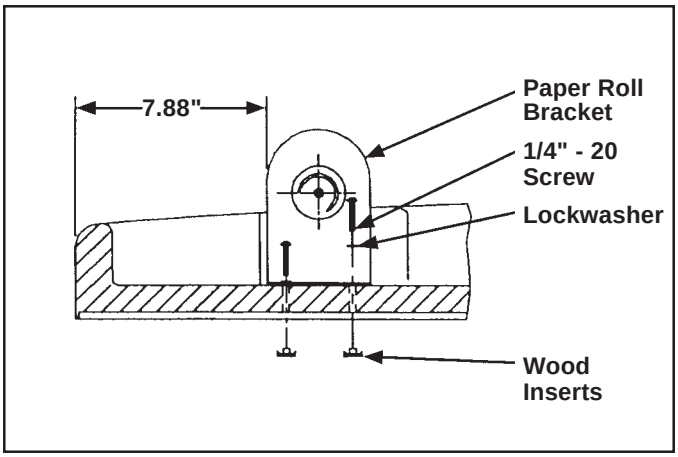

FIGURE 2

4. Mark position of (2) holes at bottom of the paper roll bracket. Repeat for other side.

5. Drill (4) 1/8" diameter pilot holes through the back section of the particle board using the marks previously made as guide.

6. Using 1/8" pilot holes as a guide, drill holes to 9/32".

MOUNTING PAPER ROLL BRACKETS

1. Install (4) 1/4" - 20 Wood inserts into previously drilled 9/32" holes.

2. Place lock washers on the (4) 1/4" - 20 screws provided and continue to mount the brackets as shown in Figure 2. Make sure bracket with opening in paper roll holder in positioned so opening in toward head of upholstery as shown in Figure 2.

405 Large Paper Roll Holder Installation

DRILLING MOUNTING HOLES

1. Remove upholstery and position back section vertical to gain access to the inner back as indicated in Figure 3.

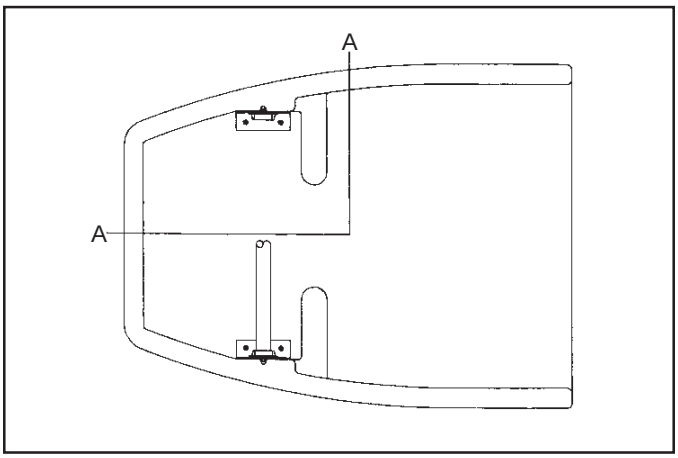

FIGURE 3

2. Remove old plant installed paper roll sockets.

3. Position paper roll bracket on the inside of the back plastic using the dimension shown in Figure 4.

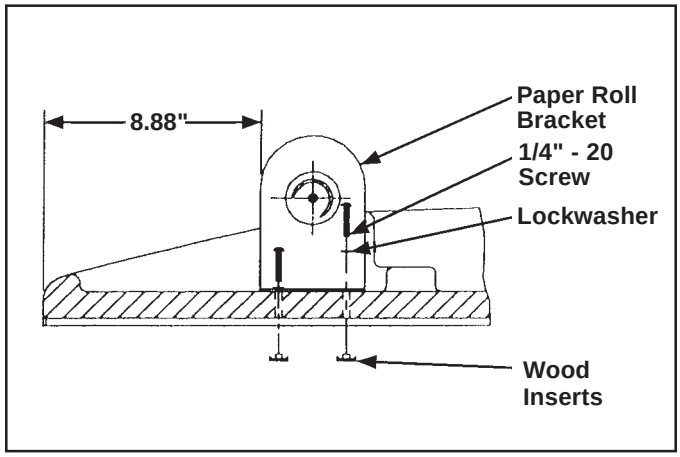

FIGURE 4

4. Mark position of (2) holes at bottom of the paper roll bracket. Repeat for other side.

5. Drill (4) 1/8" diameter pilot holes through the back section of the particle board using the marks previously made as guide.

6. Using 1/8" pilot holes as a guide, drill holes to 9/32".

MOUNTING PAPER ROLL BRACKETS

1. Install (4) 1/4" - 20 Wood inserts into previously drilled 9/32" holes.

2. Place lock washers on the (4) 1/4" - 20 screws provided and continue to mount the brackets as shown in Figure 4. Make sure bracket with opening in paper roll holder in positioned so opening in toward head of upholstery as shown in Figure 4.

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
937-526-3662 TELEX 288007 FAX 937-526-5542

© Midmark Corporation - 1993